



## Assembly Instructions

1. Open the wheeled case and remove your Range display stand, the feet will snap into place automatically.
2. Remove the panels from the case, unroll them and snap the aluminum hanger in place at the top of the mast.
3. Loosen the black spin-lock collars to extend the mast. Raise the mast to the height of your graphic and lock the mast in place. Affix the black tab at the bottom of the graphic to one of the black pins at the base of the stand. Adjust the mast to insure that the graphic is now taut.
4. Repeat this operation for each of your display stands. Now, position your Range stands in the proper alignment. You will see a black connecting post attached to the hanger and kicker on one side only. Slide the black connecting post into the adjacent hanger and kicker. Now, push the graphics together and the *edge magnets* will engage.

### Repacking instructions :

1. Roll up the mural panel with the graphic side out.
2. Place the panels in the case with black connecting post and edge magnets facing upward.
3. Insure that edge magnets are in a flat position and not riding up on the edge of the graphic.
4. Put all hardware and lights in the appropriate packaging and place in the center of the case.

