



Assembly Instructions

1. Take the mast (pole) of the Summit banner stand and screw it onto the round weighted base. The mast will stand straight up when it has been screwed in all the way.
2. Remove the graphic panel(s) from the tube, unroll it and snap the aluminum hanger in place at the top of the mast.
3. Loosen the black spin-lock collars to extend the mast. Adjust the mast to the height of your graphic and then tighten the collars. Affix the black tab at the bottom of the graphic to one of the black pins on the base. Adjust the mast to insure that the graphic is now taut.
4. To raise the bottom of the graphic off the ground, position the sliding ring to the desired height and tighten in place.
5. Attach the lamp to the top of the mast by sliding the fixture onto the t-bar. Plug into power source.

Your display is ready for business!

6. To repack: Loosen the spin-lock collar(s) and remove graphic. Roll the graphic panel(s) with the graphic side out and place it in the tube. Slide mast down fully, tighten collar(s), remove base, place banner stand in carrying case.

